K9 SPA Building a Raised Base

Start by flipping your tub over onto a Soft/Padded/Scratch free surface.




Cut and place your top rail supports arround the tub - fasten rails to themselves with wood screws



CAUTION: Screw into wood only, do not screw into the fiberglass K9Spa!

The height of your K9Spa is the most important factor in your ultimate comfort!

 For a single user - make sure the height of the tub is the same measurement from the floor to your elbow
For multiple users, vary the heights of each tub we recommend between 37-45" (for commercial application)
ADA tubs require a maximum height of 34"

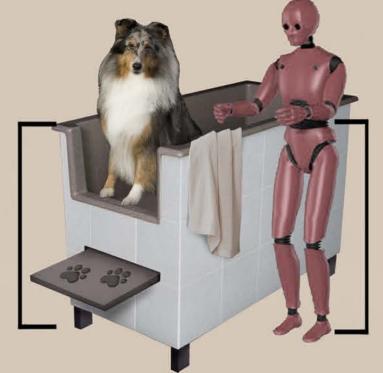

The height of your K9Spa should be the same as the height from the floor to your elbow.

K9SPA (C) 2010

K9SPA (C) 2010

ATTACH LEGS & MARK SUPPORT RAILS

Attach your legs with L brackets and add a cross rail on top of the lip in front of the tub.



4 - legs 1 - 24" rail 6 - L brackets wood screws

Lay your 56 1/4" support bars on either side of the drain, place 24" cross bars at the ends and mark the positions.



NOTE your tub slopes 1" so your marks will be 1" different from front to back.

K9SPA (C) 2010

ATTACH SUPPORT RAILS AS MARKED



Attach the support to the frame with L brackets AND wood screws.

K9SPA (C) 2010

ATTACH BASE TO FLOOR & WALL

Attach 2 "L" brackets to each leg, then attach to floor - we suggest sinking 3" bolts/screws into a concrete floor for ultimate stability.



Attach base to wall or stub wall (plumbing wall) with wood screws & "L" brackets.

*** HOOK UP PLUMBING BEFORE PROCEEDING *** Our K9Spa are plumbed like a utility sink and have a standard 2" floor shower drain opening.

ADD SIDES & STEPS/RAMP



You can now cover & seal your base. Some popular options are: Paint, Wood Seal, Linoleum, Tile or Formica!

Use your imagination and create a unique look for your new K9Spa tub!

K9SPA (C) 2010

K9SPA (C) 2010

K9SPA

Website: www.K9Spa.com Email: IngridSutton@gmail.com Contact: Ingrid Sutton 360-701-0665

K9Spa (c) 2010